







# **CONSTRUCTION METHOD**

Down Pipe waterproofing using non-shrink grout LEMAX Grout LM-G650



#### **Fields**

Repairing concrete, filling floor-wall holes, foundation for machine base, Grouting pre-engineered steel column base and joints using Lemax Grout LM-G650

#### **Product Description**

Lemax Grout LM-G650 is a pre-mixed powder technical grout that only needs to be mixed with clean water in the correct proportions to get the best grout for pouring or pumping applications.

### **Application**

Repairing concrete, filling in floor-wall holes, foundations for machine bases, Grouting pre-engineered steel column bases, sealing gaskets, connecting rods... . Use for both vertical and horizontal surfaces.

## Advantage features

- · Excellent fluidity, easy to use
- · Good dimensional stability
- Fast Strength Development Rate High Strength
- No water separation

- · High strength
- Non-toxic, non-corrosive
- · Impact resistance, vibration
- The grout can be pumped with a suitable pump











# Down Pipe waterproofing using non-shrink grout LEMAX Grout LM-G650

### **System structure**

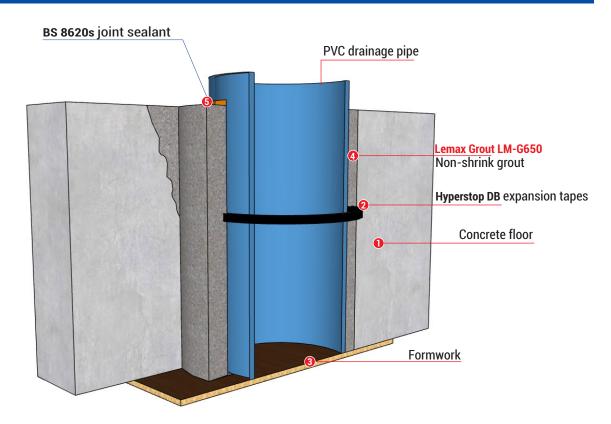

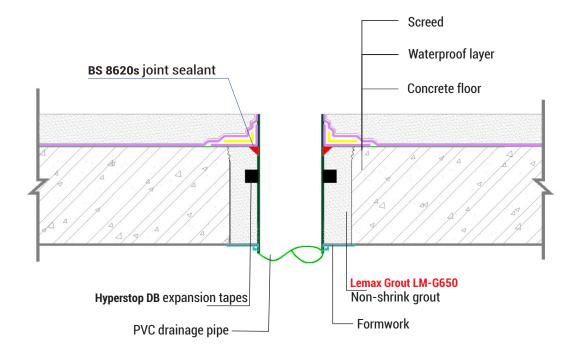










## Down Pipe waterproofing using non-shrink grout LEMAX Grout LM-G650

#### Product pictures and construction tools and equipment

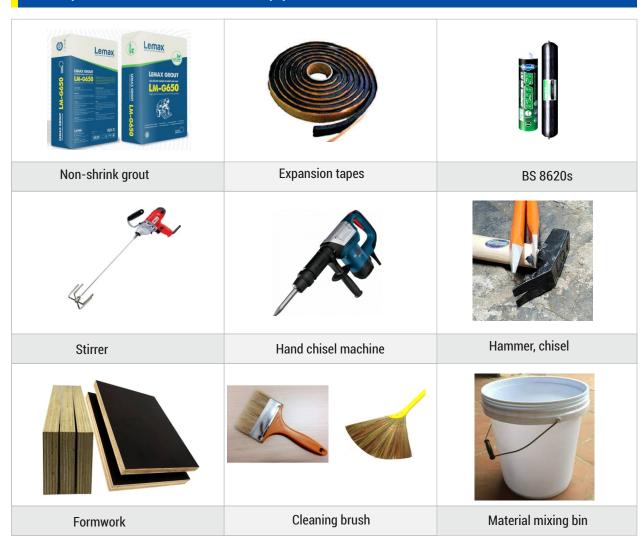

#### **Application**

#### APPLYING LEMAX Grout LM-G650

#### Surface preparation

- The hole around the down pipe must be at least 10mm.
- Clean concrete surface with broom, free from impurities, chemicals, and solid.
- Moisten the surface with clean water before grouting. Wrap the Hyperstop DB expansion tape around the down pipe.
- Formwork installation may use formwork made of wood, steel or other materials as the case may be, but must be rigid, watertight and held firmly to prevent warping under the pressure of the grout until the grout has hardened.
- Before installation, it is recommended to apply mold lubricant on the inside of the formwork for easy removal.

### Mixing

- Stir with hand mixer at slow speed (600 rpm) for 3 minutes.
- Put clean water into the mixing container first, slowly add the grout after while the stirrer is running, mix well until a smooth, homogeneous, liquid mixture is obtained.
- Ratio of mixing water is 15% by weight of grout.











# Down Pipe waterproofing using non-shrink grout LEMAX Grout LM-G650

#### Construction

- The minimum application temperature is 10°C and the maximum is 40°C.
- The norm is 13.1 liters of grout/bag of 25kg
- Apply grout immediately after thoroughly mixing, maintaining pressure to keep the flow uninterrupted without interruption.
- Apply pouring grout as quickly as possible (pour within 20 minutes after mixing), must be poured continuously until finished.
- When grouting the structure, it is necessary to clean and saturate the surface & let it dry before application.
- Cure the surface immediately after the grout has just dried, with wet strength, or spray with specialized curing solutions.
- Clean construction equipment and tools with water immediately after construction is completed, before the material hardens.
- Hardened grout can only be removed by mechanical means.

#### Note

- Must comply with the minimum curing time of 3 days in exposed grout surfaces.
- Do not add cement or sand to the pouring grout mix.
- Storage: Store in a dry place, do not stack more than 10 bags for a long time.
- Shelf life: Minimum 6 months if stored properly in original unopened packaging.

# **Images of construction steps**

(Images are for reference only)





Grouting



Clean the neck of the pipe, wrap the expansion tape



Surface after grouting



Apply BS 8620s glue to seal the gap around the downpipe